

Installation Instructions for CLEAR FOCUS™ Films

For All Installations:

- **Make sure the glass surface is clean, dry, and free of any residue and solvent.** For best results we recommend the use of soap and water. Rinse and dry surface well with **brown industrial-type paper towels** or **clean, dry, residue-free cloths** to thoroughly clean the glass. Allow the glass to dry completely before applying the graphics.
- **Avoid excessive surface temperatures - heat or cold.** Make sure the temperature of the glass surface is above 40°F (5°C), but not higher than 90°F (32°C). Excessive heat can cause the film to stretch too easily.
- **Do not stretch the film as you mount it,** and do *not* squeegee it down firmly until positioned correctly.


FOUR EASY STEPS



Note: For longevity of image, an overlamine is required and, if necessary an edge sealer. Minimum font size suggested: 50 point.

Questions?


In the U.S. call Clear Focus Imaging at (800) 307-7990. Outside the U.S. contact your local distributor.

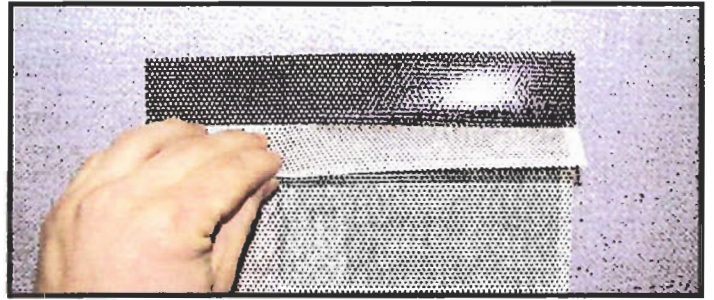

1) Lift the upper portion of the liner away from vinyl and fold back approximately 3 inches or 76mm.



2) Carefully position the film so that it's straight, and press the upper corners in place using light pressure until properly aligned.

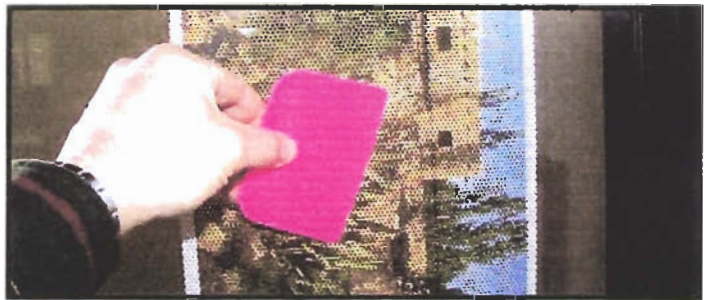

3) Using your hand lightly press the film in place. Continue by peeling away more of the liner and continue applying light pressure to the film. Do this until liner is completely removed and the poster is in place



4) Squeegee the film from the center and work outward in all directions. Lift up and release the tacked top corners before squeegeeing them in place.